

# String Chart for 38 String “Delight” Heartland Harp

---



---

1	.025	C-RED
2	.025	B
3	.025	A
4	.025	G
5	.025	F-BLUE
6	.025	E
7	.028	D
8	.028	C-RED
9	.032	B
10	.032	A
11	.032	G
12	.036	F-BLUE
13	.036	E
14	.036	D
15	.040	C-RED
16	.040	B
17	.040	A
18	.045	G
19	.045	F-BLUE
20	.050	E
21	.050	D
22	.055	Middle C-RED
23	.055	B
24	.050/.008x 25.75	A
25	.050/.010x27.25	G
26	.050/.013x28.625	F-BLUE
27	.050/.015x30.125	E
28	.050/.018x31.625	D
29	.055/.018x33.125	C-RED
30	.055/.020x34.12	B
31	.020/5/.008x36.0 SFB	A
32	.020/6/.008x37.5 SFB	G
33	.020/5/.010 x39. SFB	F-BLUE
34	.022/6/.010 x40.5 SFB	E
35	.022/6/.012 x 42.25 SFB	D
36	.024/5/.015 x44. SFB	C-RED
37	.026/5/.015 x 45.625 SFB	B
38	.026/10/.015 x 47 SFB	A

**IMPORTANT NOTE:** Please do not put strings other than the ones designated above on your harp. To do so may cause severe stress on your soundboard, and lead to damaging your harp!  
To re-order strings, call Vermont Strings at 1-802-244-8564. Strings should be changed every 1-2 years.